




# Samsung Chromebook Series 3 Bottom Cover Replacement

Change the bottom cover of your Samsung Chromebook Series 3.

Written By: Andrey Radchishin

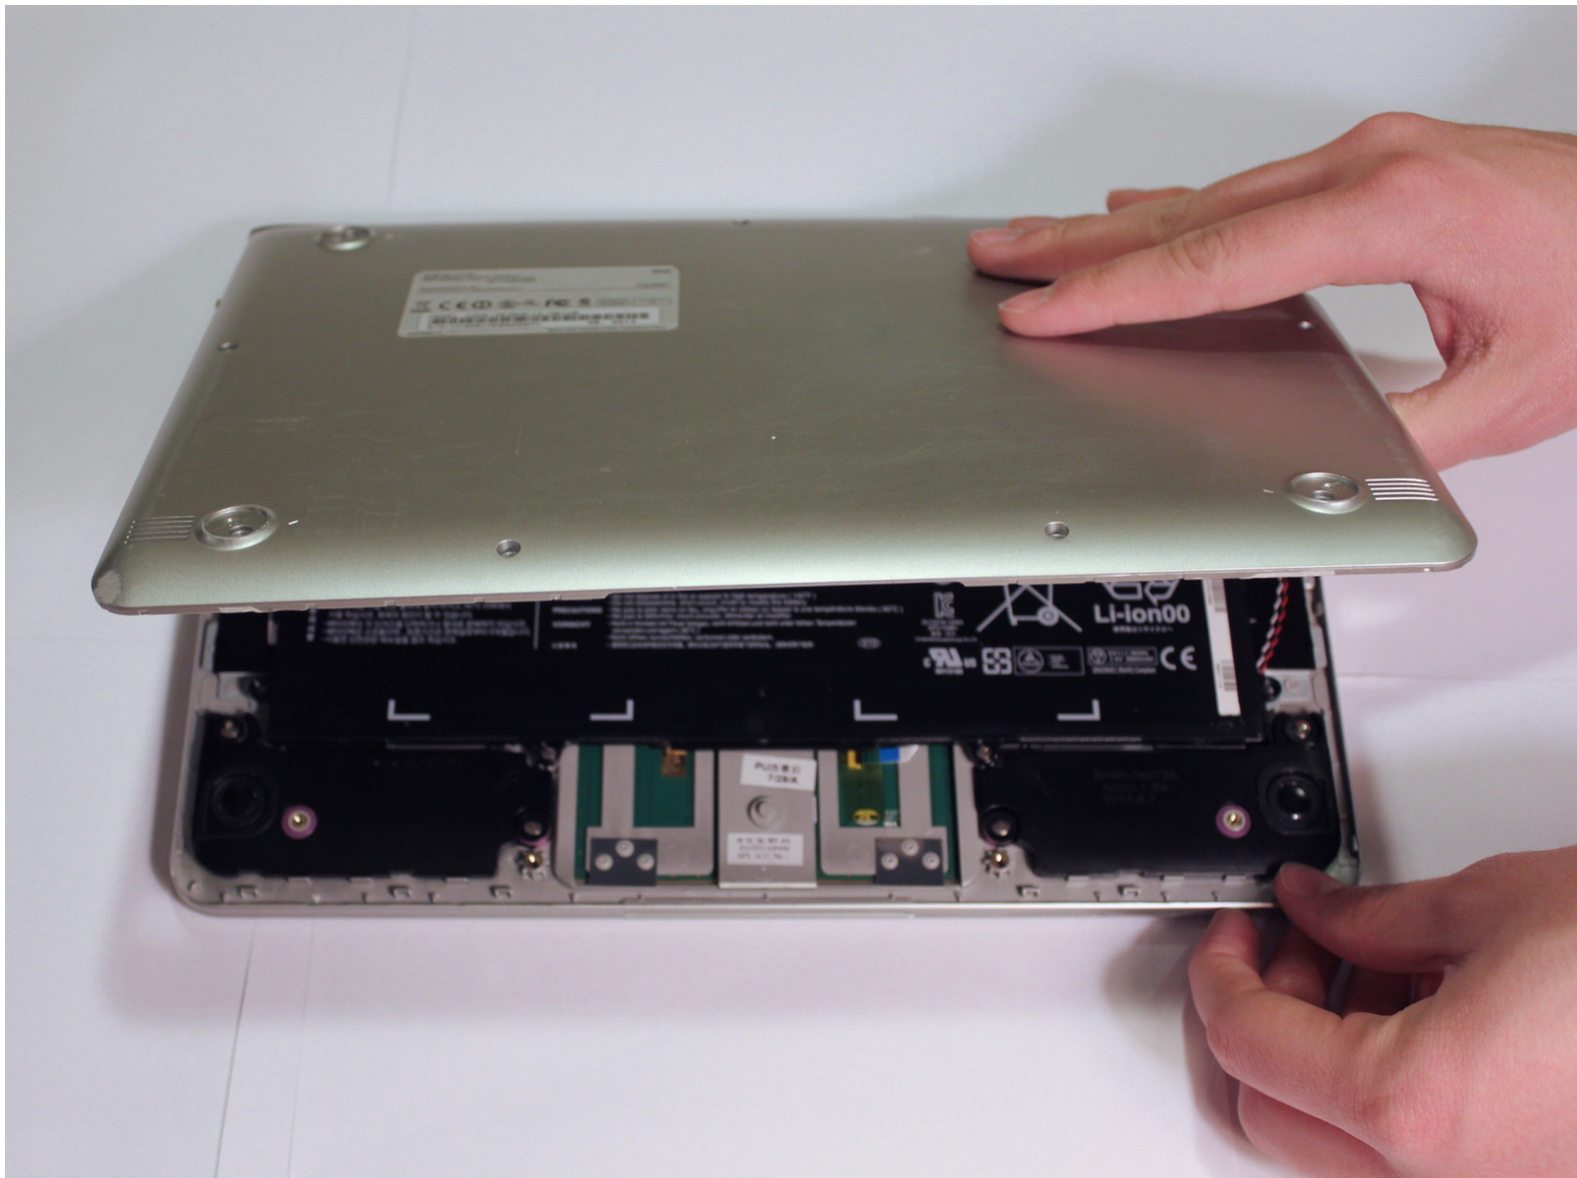

## INTRODUCTION

A quick guide on how to take off the bottom cover on your Chromebook. This procedure is a prerequisite for doing most repairs to your Chromebook.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Preparing Bottom Cover



- Lay the Chromebook down so that the bottom cover is facing up.
- Remove the rubber feet on the four corners of the Chromebook in order to get to the screws underneath. They are stuck on with an adhesive.

## Step 2 — Unscrewing Bottom Cover



- Remove the nine 4.7 mm screws on the bottom cover using a Phillips #00 screwdriver.




## Step 3 — Removing Back Cover



- Pry up the plastic strip on the back of the Chromebook using a plastic opening tool.

**i** It is not necessary to remove it completely. It just needs to be separated from the bottom cover.

## Step 4

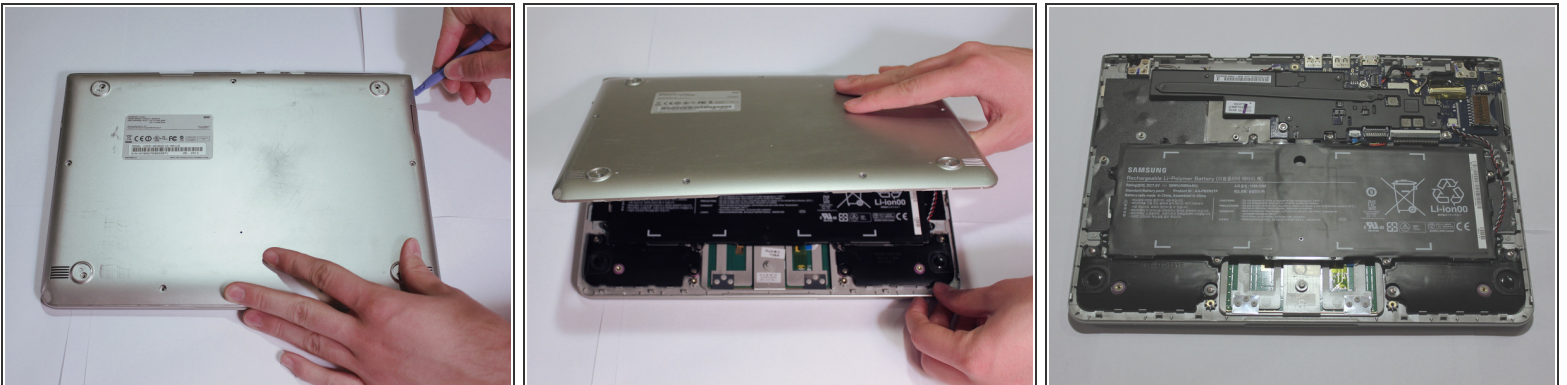

- Pry off the bottom cover using a plastic opening tool.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-14 05:10:17 PM.